




Use & Care Guide

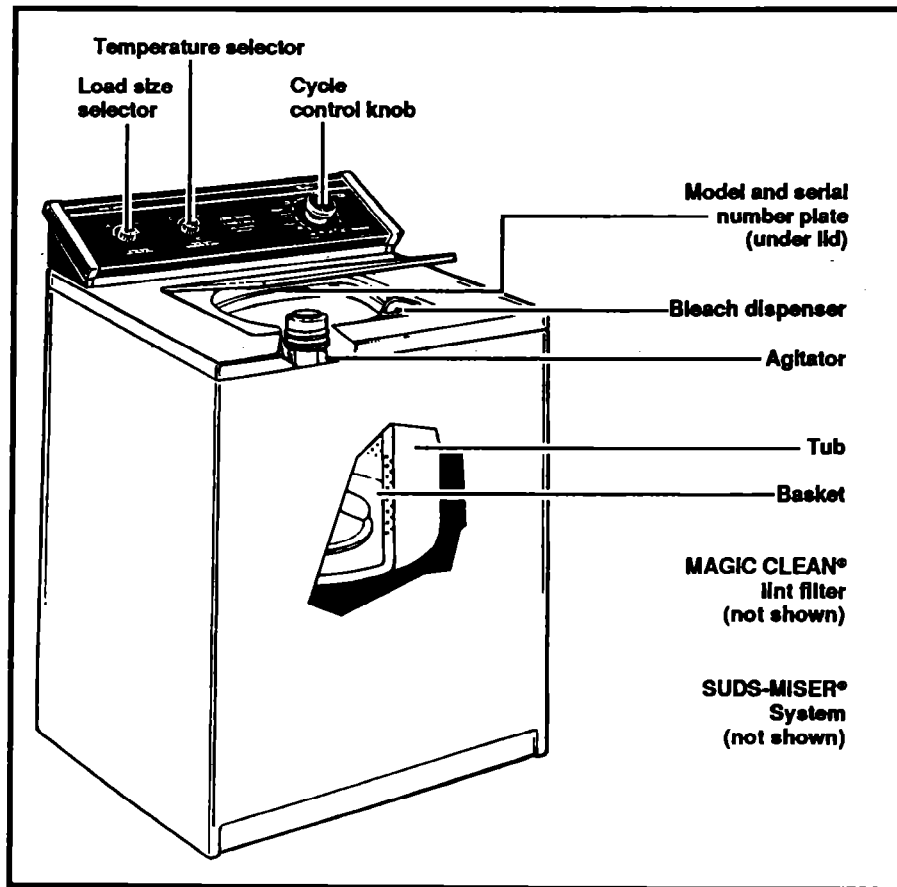

**SUPER CAPACITY TWO SPEED
AUTOMATIC WASHER
LA5588XY**

Contents

	Page
Important Safety Instructions	3
Operating Instructions	
Starting your washer	4
What happens in each cycle	5
Other Operating Instructions	
Rinse and spin	9
Drain and spin	9
Pre-wash cycle	9
Liquid bleach dispenser	10
MAGIC CLEAN® lint filter	10
SUDS-MISER® System	11
If You Need Service Or Assistance	13
Whirlpool Automatic Washer Warranty	16

©1992 Whirlpool Corporation

If your washer has a Consumer Buy Guide label, remove it. It will be easier to remove before the washer is used. To remove any remaining glue:

- Rub briskly with thumb to make a ball, then remove.
or
- Soak area with liquid hand dishwashing detergent before removing glue as described above.

Do not use sharp instruments, rubbing alcohol, flammable fluids or abrasive cleaners. These can damage the finish. See "Important Safety Instructions" on page 3.

Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product. Then complete the form below. Have this information ready if you need service or call with a question.

- Copy model and serial numbers from plate (under lid near hinge) and the purchase date from the sales slip.
- Keep this book, the Laundry Guide and the sales slip together in a handy place.

Model Number

Serial Number

Purchase Date

Service Company Phone Number

Important Safety Instructions

⚠ WARNING

To reduce the risk of fire, electrical shock, or injury to persons when using your washer, follow basic precautions, including the following:

- **Read all instructions before using the washer.**
 - **NEVER** wash items cleaned, washed, soaked in or spotted with wax, paint, gasoline, or flammable fluids in the washer. The fumes can create a **FIRE HAZARD** or **EXPLOSION**. **ALWAYS** hand launder and air dry fabrics containing these materials.
 - **NEVER** allow children to operate, play with, or crawl inside the washer. Close supervision of children is necessary when the washer is used near children.
 - When discarding an old washer, **ALWAYS** remove the lid to prevent accidental entrapment.
 - **DO NOT** reach into the washer basket while it is filling with water, while agitator is moving or while basket is spinning. If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds.
 - **DO NOT** tamper with controls.
 - **NEVER** use or store flammable fluids (dry-cleaning solvents, kerosene) in or near your washer. **DO NOT** add flammable fluids to the wash water.
- These substances give off vapors that can create a **FIRE HAZARD** or **EXPLOSION**.
- If hot water has not been used recently (usually 2 weeks or longer), hydrogen gases may build up in the water heater and the hot water pipes. **HYDROGEN GAS IS EXPLOSIVE**. To prevent injury or damage, before using your washer, turn on all hot water faucets and allow water to run for several minutes. This will allow gases to escape. **DO NOT** smoke or use any open flame near the faucet while it is open.
 - **You are responsible for making sure that your washer:**
 - is installed, repaired, and has parts replaced by a qualified person.
 - is properly installed and leveled on a floor that can support the weight.*
 - is connected to the correct 3-prong outlet, electric supply, water supply and drain.*
 - is properly grounded.*
 - is properly maintained.*
 - is protected from the weather and kept where the temperature will not fall below freezing.

*See the Installation Instructions.

— SAVE THESE INSTRUCTIONS —

IMPORTANT SAFETY INSTRUCTIONS


Additional safety instructions and your responsibilities

- **ALWAYS** store detergent, laundry aids and other materials in a cool, dry place where children can't reach them—in a locked cabinet if possible.
- **ALWAYS** read and follow instructions on packages of detergents and laundry aids—especially warnings and precautions.
- **HAZARDOUS FUMES** can form if chlorine bleach is used in the same wash as ammonia or acids such as vinegar or rust remover.
- **ALWAYS** unplug the power supply cord before attempting to service the washer.
- **DO NOT** machine wash glass fiber materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.
- **You are responsible for making sure that your washer:**
 - is used only for jobs normally expected of home automatic washers.
 - is not run by children or anyone unable to operate it properly.

Operating Instructions

Starting your washer

Be sure to measure and add detergent, then place a sorted load in the washer before starting it.

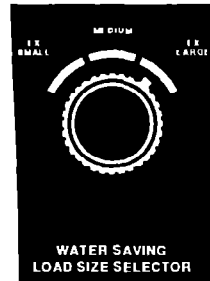


1. Select a load size

- Turn the knob to point at a setting that describes the size of load you want to wash.
- Set the knob on EX SMALL (a few small items), MEDIUM or EX LARGE (a full load).

NOTE: For best washing results, items should move freely in the washer. Do not overload the washer or choose a water level that is too low for your wash load.

For best results with permanent press clothes, use the EX LARGE water level.

Reduce wash time when using EX SMALL water level setting. Loads with only a few small items need less wash time for best results.

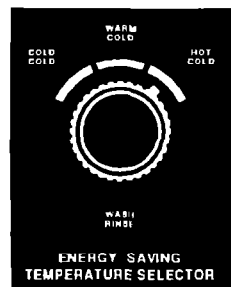


2. Select water temperature

- Match the water temperature to the type of fabric and soils being washed.
- The top temperature is the wash selection and the bottom temperature is the rinse selection.

NOTE: Use warm wash water with the PERMANENT PRESS or KNITS GENTLE Cycles.

For heavily soiled permanent press or knit clothes, pre-wash or pre-soak before washing in warm water.

ALWAYS use cold rinse water for permanent press fabrics.

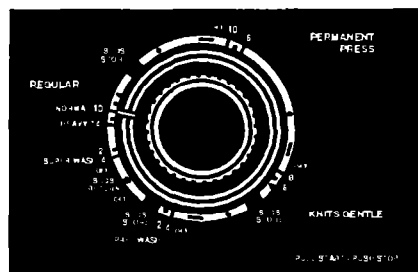

3. Select cycle and wash time Start the washer

- Push in the Cycle Control Knob and turn it clockwise.
- Stop when the indicator on the knob's outer ring points to the number in the wash cycle you want. The numbers are minutes of wash time.
- Start the washer by pulling out the Cycle Control Knob. The washer will fill to the selected water level with the selected wash water temperature. The washer will begin agitating immediately after filling. Agitation can occur with the washer lid up or down.
- To stop the washer at any time, push in the Cycle Control Knob. To restart the washer, pull out the Cycle Control Knob.

What happens in each cycle

Each cycle has been designed for different kinds of fabrics.

When the Cycle Control Knob is set to a number and pulled out, the washer fills before agitation and timing starts. After agitation starts, the knob turns clockwise until it points to OFF and the cycle ends.

The washer will pause briefly throughout each cycle. These pauses are normal for washer operation.


Gentle Wash System

For better fabric care in the REGULAR and PERMANENT PRESS cycles, the agitation speed is reduced during the last few minutes of wash agitation time.

Operating Instructions Continued

Regular/Heavy Cycle

A cycle for sturdily constructed fabrics that are heavily soiled.

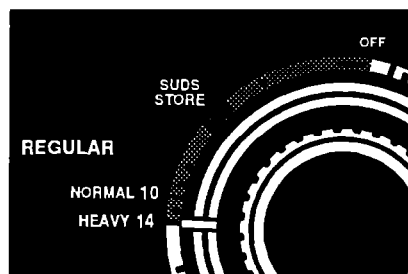

FILL	to Selected Level
WASH	8 Minutes High Speed
WASH	6 Minutes Low Speed
DRAIN	No Agitation
SPIN	High Speed
FILL	for Rinse
RINSE	High Speed
DRAIN	No Agitation
SPIN	High Speed, Spray Rinse

Regular/Normal Cycle

A cycle for regular loads of fabrics that are moderately soiled.



FILL	to Selected Level
WASH	4 Minutes High Speed
WASH	6 Minutes Low Speed
DRAIN	No Agitation
SPIN	High Speed
FILL	for Rinse
RINSE	High Speed
DRAIN	No Agitation
SPIN	High Speed, Spray Rinse

Permanent Press Cycle


A cycle designed for moderately and lightly soiled permanent press and some synthetic fabrics. The cool-down rinse helps keep wrinkles from setting into these items.



FILL	to Selected Level
WASH	6-2 Minutes High Speed
WASH	4 Minutes Low Speed
PARTIAL DRAIN	(Pause)
REFILL COOL-DOWN	
WASH	Low Speed
DRAIN	No Agitation
SPIN	Low Speed
FILL	for Rinse
RINSE	High Speed
DRAIN	No Agitation
SPIN	Low Speed, Spray Rinse

Knits Gentle Cycle

A cycle that gently washes and spins moderately and lightly soiled delicate items and washable knits.

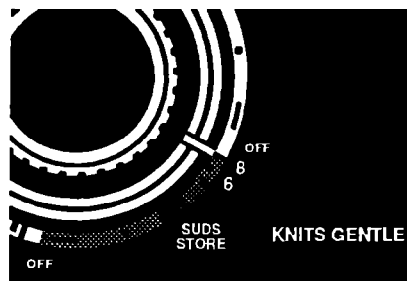


FILL	to Selected Level
WASH	4-2 Minutes Low Speed
▲SOAK	2 Minutes No Agitation
WASH	2 Minutes Low Speed
DRAIN	No Agitation
SPIN	Low Speed
FILL	for Rinse
RINSE	Low Speed
DRAIN	No Agitation
SPIN	Low Speed, Spray Rinse

▲ Indicates that machine is pausing for a brief soak period.

Operating Instructions Continued

Pre-wash Cycle

A cycle that uses a brief period of high-speed agitation to loosen and remove heavy soils and stains. Use recommended amount of detergent or pre-soak additive. The Soak cycle should always be followed by a wash cycle.

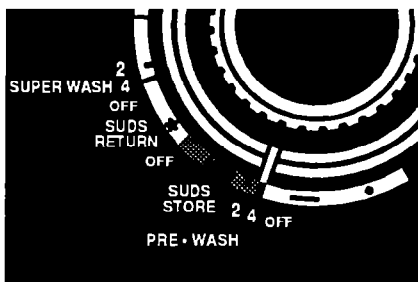

FILL to Selected Level

WASH 4 Minutes High Speed

DRAIN No Agitation


SPIN High Speed

WASHER STOPS Select Wash Cycle

Special care is needed when pre-washing laundry. See the Laundry Guide for soaking tips.

Super Wash Cycle

Use for washing heavily soiled loads that require maximum soil removal. Double the amount of detergent recommended when using the SUPER WASH cycle.

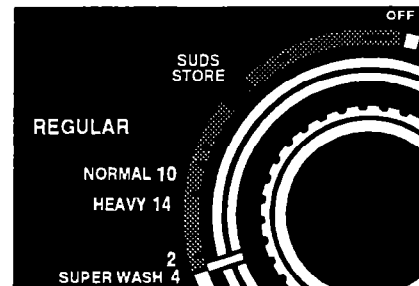

FILL to Selected Level


WASH 4 Minutes High Speed

PARTIAL DRAIN No Agitation

REFILL to Selected Level

After the partial drain, the washer automatically refills and goes into the REGULAR/HEAVY cycle. Be sure to use enough detergent for the double wash.


Other Operating Instructions

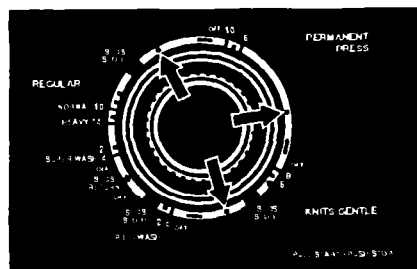

Rinse and spin

When using extra detergent for heavily soiled clothes, or washing special-care items, you may want an extra rinse and spin.

1. Push Cycle Control Knob in.
2. Turn clockwise to one of the dots on the dial, as illustrated.
3. Pull Cycle Control Knob out. The washer will fill to selected level, agitate 2 minutes, drain and spin.

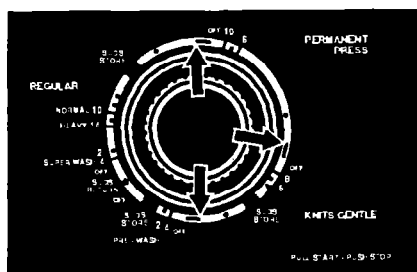

Drain and spin

A drain and spin may help shorten drying times for some heavy fabrics or special-care items by removing excess water.

1. Push Cycle Control Knob in.
2. Turn clockwise until indicator points to the bar just before an OFF area on the dial, as illustrated.
3. Pull Cycle Control Knob out. The washer will drain and spin.




Pre-wash cycle

For best results, use warm water for pre-washing stained laundry. Hot water can set stains.

1. Use recommended amount of pre-soak product or detergent.
2. Push Cycle Control Knob in.
3. Turn clockwise until indicator points to a number next to PRE-WASH.
4. Pull Cycle Control Knob out. The washer will start.
5. When the cycle is over, add detergent for the next selected wash cycle. The Pre-wash cycle should always be followed by a wash cycle.


NOTE: See the Laundry Guide for additional pre-washing information.

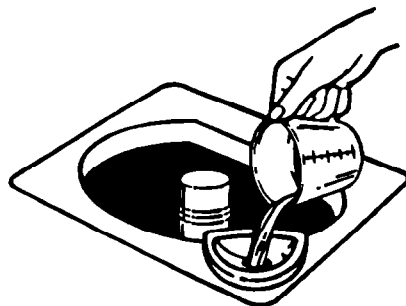

Liquid bleach dispenser

Always measure bleach. Do not guess. Never use more than 1 cup (250 mL) for a full load. Use less with lower water level settings. Follow manufacturer's directions for safe use. Use a cup with a pouring spout to avoid spilling.

1. Load the washer first.
2. Pour measured bleach carefully into dispenser. Do not let bleach splash, drip or run down into washer basket. Undiluted bleach will damage any fabric it touches.
3. Start the washer. Bleach will be diluted automatically during the wash part of the cycle.

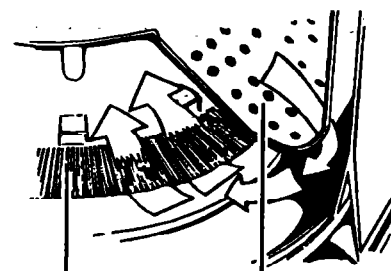





MAGIC CLEAN
lint filter

Basket
interior

MAGIC CLEAN® lint filter

The lint filter at the bottom of the washer basket cleans itself. During agitation, wash and rinse water pass over the filter, separating lint from water. The collected particles of lint are then continuously spun away from the filter and washed out of the system at the end of the wash cycle.

If your washer drains into a tub, remove any lint collected in the tub or strainer.

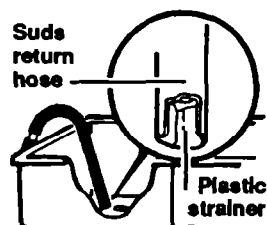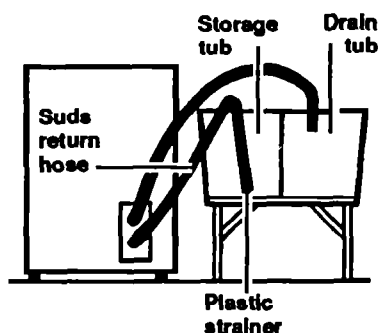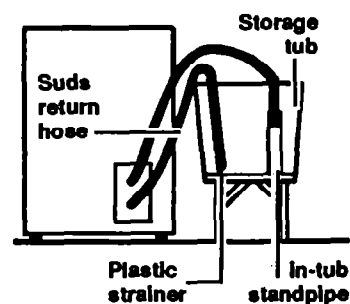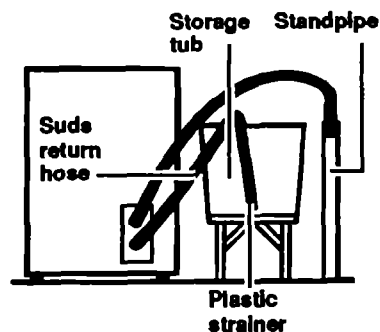

SUDS-MISER® System

The SUDS-MISER® System has two drain hoses. One hose moves a portion of the used wash water into a storage tub, then back into the washer for use during the next wash. The other hose carries the wash water to a standpipe drain or to another tub with an open drain.

A standpipe drain is available for placement in the drain opening of your tub. To order the in-tub standpipe, ask your nearest authorized Whirlpool dealer for Part Number 89121.

If you do not want to re-use the wash water for a load, leave out the stopper in the storage tub so the water can drain.

To save wash water make sure the stopper is in the storage tub.

NOTE: The SUDS-MISER® System does not save the rinse water from any cycle, nor does it save the wash water from the PERMANENT PRESS cycle.



To re-use wash water:

1. Set the Cycle Control Knob on SUDS RETURN. Do not add the load items at this time.
2. Pull the Cycle Control Knob out. The washer will pump most of the wash water from the storage tub back into the washer basket.
3. After the wash water is pumped back into the washer, push in the Cycle Control Knob.
4. Add about $\frac{1}{2}$ the recommended amount of detergent.
5. Add the load items.
6. Turn the Cycle Control Knob clockwise to the desired cycle and wash time.
7. Pull out the Cycle Control Knob to start the washer.
8. Drain the storage tub. About 1 inch (2.5 cm) of wash water remains in the tub after the fill. The water contains soils that have settled out.

NOTE: The end of the suds return hose has a plastic strainer to prevent objects from being pulled into the washer during SUDS RETURN.

If You Need Service Or Assistance

We suggest you follow these steps:

1. Before calling for assistance ...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

If your washer does not fill:

- Is the power supply cord plugged into a live circuit with the proper voltage?
- Are both water faucets open?
- Have you checked your home's main fuses or circuit breaker box?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

If your washer does not spin:

- Is the lid closed?
- Is the power supply cord plugged into a live circuit with the proper voltage?
- Have you checked your home's main fuses or circuit breaker box?

If your washer stops during a cycle:

- The washer pauses briefly at different times in each cycle. These pauses are normal.

If your washer fills and drains without running:

- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

Make sure the drain hose is higher than the water level in the washer. If it isn't:

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out.
(See Installation Instructions.)

2. If you need assistance*...

Call Whirlpool Consumer Assistance Center telephone number. Dial free from anywhere in the U.S.:

1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. William Clark
Consumer Assistance Representative
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

Please include a daytime phone number in your correspondence.

3. If you need service*...



Whirlpool has a nationwide network of authorized WhirlpoolSM service companies.

Whirlpool service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized service company in your area, call our Consumer Assistance Center telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD - ELECTRICAL APPLIANCES -
MAJOR - SERVICE & REPAIR MAJOR - REPAIRING & PARTS

OR

WASHING MACHINES, DRYERS
& IRONERS - SERVICING

WHIRLPOOL APPLIANCES
AUTHORIZED WHIRLPOOL SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 Maple _____ 888-8888

OTHER OPERATING INSTRUCTIONS • IF YOU NEED SERVICE OR ASSISTANCE

**4. If you need FSP®
replacement parts*...**

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 3 or call the Whirlpool Consumer Assistance Center number in Step 2.


**5. If you are not satisfied with how
the problem was solved*...**

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer and Whirlpool have failed to resolve your problem.

Major Appliance Consumer
Action Panel
20 North Wacker Drive
Chicago, IL 60606

- MACAP will in turn inform us of your action.

*When requesting assistance, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request.

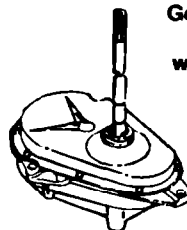

**Gearcase assembly
covered by your
warranty. See back
cover for more
information.**

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

IF YOU NEED SERVICE OR ASSISTANCE:

WHIRLPOOL®

Automatic Washer Warranty

AW015

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials (including top and lid rust) or workmanship. Service must be provided by an authorized Whirlpool® service company.
LIMITED FIVE-YEAR WARRANTY From Date of Purchase	FSP replacement parts for any part of gearcase assembly if defective in materials or workmanship. The gearcase assembly is shown in the "Service or Assistance" section of this book. FSP replacement parts for any top and lid rust.
LIMITED TEN-YEAR WARRANTY From Date of Purchase	FSP replacement of outer tub should it crack, or fail to contain water, due to defective materials or workmanship.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of the washer. 2. Instruct you how to use the washer. 3. Replace house fuses or correct house wiring or plumbing. <p>B. Repairs when washer is used in other than normal, single-family household use.</p> <p>C. Pickup and delivery. This product is designed to be repaired in the home.</p> <p>D. Damage to washer caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p> <p>E. Any labor costs during the limited warranties.</p> <p>F. Repairs to parts or systems caused by unauthorized modifications made to the appliance.</p>	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

If you need service, first see the "Service and Assistance" section of this book. After checking "Service and Assistance," additional help can be found by calling our Consumer Assistance Center telephone number, 1-800-253-1301, from anywhere in the U.S.

® Registered Trademark / SM Service Mark of Whirlpool Corporation